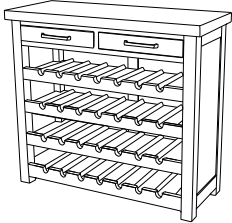



Parts & Hardware


A		x 1PC
B		x 4 PCS
C		x 2 PCS
D		x 4 PCS
E		x 4 PCS

Garden Trading®

Walcote Winerack Sideboard Assembly Instructions

Please read through these instructions and ensure they are kept for future reference.
All parts and hardware are listed on the back of this guide.

**WHEN ASSEMBLING THIS PRODUCT PLEASE PLACE PARTS
ON A SOFT SURFACE TO AVOID DAMAGE OR SCRATCHES.**

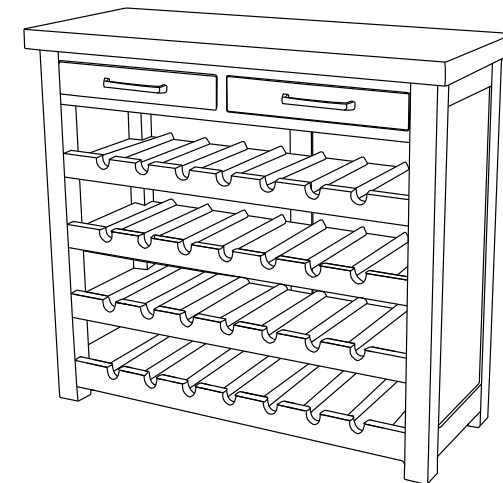

Care Instructions

This product is made from Bayur Wood. Wood is a natural material and variations in colour and texture may occur.

To keep your sideboard clean, we advise dusting regularly with a small brush or vacuum. Any spillages should be wiped clean with a damp cloth immediately in the direction of the grain.

To preserve its condition and avoid fading over time, avoid exposing your furniture to direct sunlight. Discolouration may occur and cause the wood to crack.

We recommend keeping your sideboard away from heat sources like fireplaces or radiators - plus moisture - to prevent warping.

Please do not drag the furniture, we recommend to always lift it to move, avoiding any breakages.


Garden Trading®

gardentrading.co.uk

customerservices@gardentrading.co.uk


TGTC, Hargreaves Road, Groundwell Industrial Estate, Swindon, SN25 5AZ

①

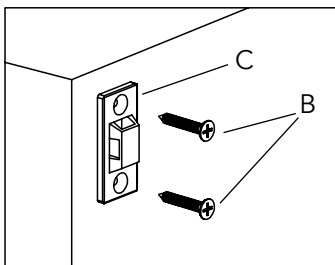


Mark and drill holes for screws, installing one anti-tip bracket onto the back of your furniture piece in a vertical position.

②

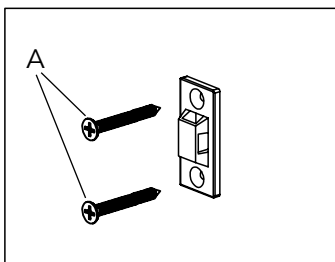


Mark and drill holes for screws before installing another bracket onto the wall, taking care to line it up with the mounted furniture bracket.

③

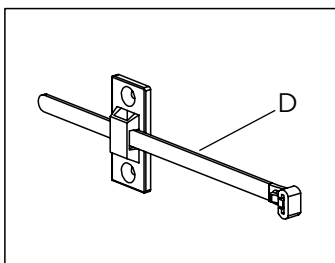


Thread the strap through both anti-tip brackets mounted onto the wall and your furniture.

④

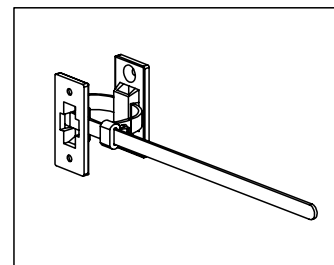

Ensure your furniture is moved into its final position and pull the strap threaded through both anti-tip brackets, until it is parallel with the wall.

⑤

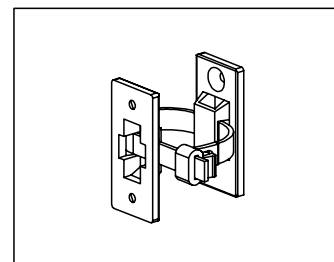

Tighten the strap until snug and cut off the end.

Anti-tip kit hardware and installation instructions are included. We strongly recommend the professional installation of the included anti-tipping restraint in order to securely anchor your furniture to the wall, preventing risk of damage or serious injury.

Note: Before drilling, check for hidden pipes and cables in the wall in order to avoid them. Where the furniture is positioned against a partition wall, the restraint must be fixed to a wall stud.

Any damage incurred to the furniture or the concrete wall as a result of improper installation of this restraint will be the responsibility of the owner.

